




## COLD AIR INTAKE INSTRUCTION MANUAL

1. Remove Front bar, driver's headlight, Under battery piping and OEM Air intake system.
2. Undo the Earth cable bolt which is located in front of battery box (behind headlight).
3. Tighten aluminium screw in fitting onto pipe. **Be careful not to over tighten and use grease/anti seize compound.**
4. Slide in supplied air intake pipe under the battery tray. The pipe has to point towards 4 OCLOCK and be twisted into position. Be careful to take care not to scratch finish of pipe when doing this.
5. Refit the OEM earth strap, but make sure that paint is removed and good earth is achieved
6. Fit Special reinforced silicone hose onto turbo and air pipe - . This is tricky and a sometimes hard to do. So have patience and be careful not to cut or slice your hands open. Tighten clamps.



PIC 1

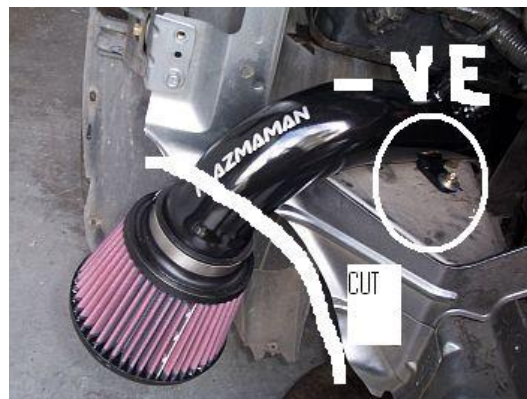

PIC 2

7. Pick up air filter and try to fit onto end of pipe. You will realise that there is metal in the way. You have 2 options here. You can either push this metal back with your hands or soft mallet, or cut the metal away (PIC 2). By cutting the metal out of the way , more air flow to the filter is achieved **.IF CUTTING METAL , YOU MUST INSERT A RAG UP THE AIR FILTER PIPE , SO AS TO STOP ANY FOREIGN MATERIAL GOING UP PIPE DURING CUTTING . WE RECOMMEND AN AIR SAW BE USED.** Once modified, install filter and secure.

**8. Install BOV return hose and rocker cover breather hose that is supplied. The breather hose slides into the 90 deg Rubber right angle that comes off the rocker cover. (PIC 3)**

**9. CAUTION – DUE TO THE LOW NATURE OF THE AIR INTAKE, DO NOT DRIVE THROUGH ANY DEEP WATER. (IE. 200+ MM IN HEIGHT AT SPEED). IT IS CRITICAL THAT THE PLASTIC COVERS AROUND THE WHEELS BE UTILISED SO AS TO STOP WATER SPRAYING ONTO THE AIR FILTER. THROUGH OUR THOROUGH TESTING PROGRAMS OF THESE INTAKES, THERE HAS BEEN ABSOLUTELY NO PROBLEM, UNLESS THE OWNERS FAILS TO FOLLOW THE ABOVE GUIDELINES**

**PLAZMAMAN and our highly trained technicians will be happy to assist if at any point during the fit-out you are unsure of how to complete a stage, please call (02) 97251728.**



**Warning: It is recommended the XR6 Turbo 800hp intercooler kit be fitted by PLAZMAMAN's qualified and highly trained mechanics. If this kit is not fitted by Plazmaman, we will not be held responsible for any damage or mistakes made during the installation process.**